


NOVA LUCE


9040128 9040129

1

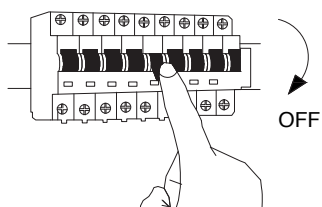


Turn off the general switch

2

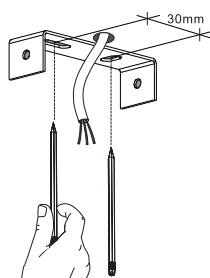


Mark where to drill

3




Drill holes

4

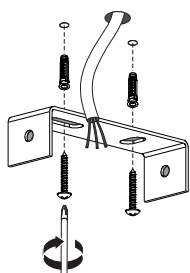


Apply plastic anchors with screws

5

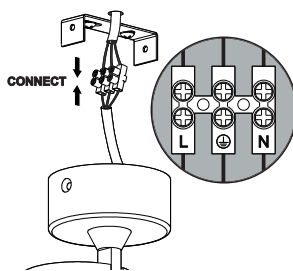


Connect wires

6

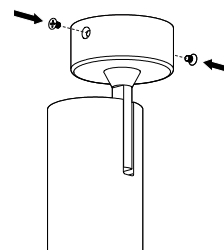

Apply the side screws

7

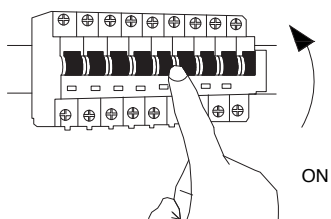

Turn on the general switch

