



NOVA LUCE


9088166

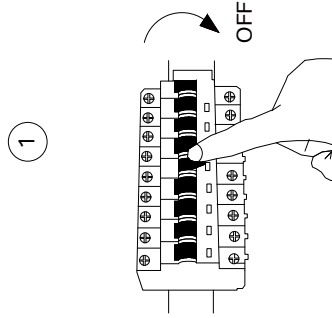


Turn off the general switch




Drill holes & apply plastic anchors
With screws

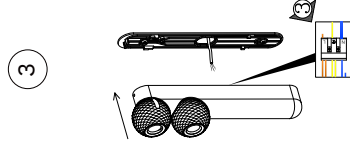


Connect the wires

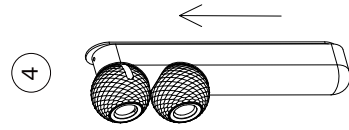

Put it in place by
Pushing upwards



Apply the top nut

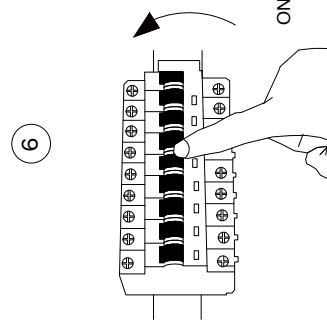

Turn on the general switch

