


NOVA LUCE


9002601

1

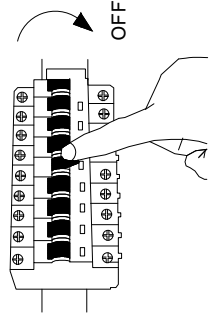


Turn off the general switch

2

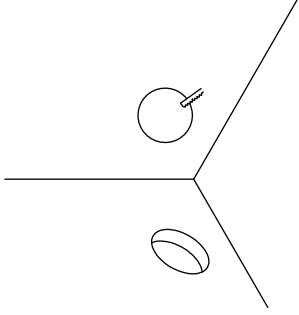


Create a CutOut

3

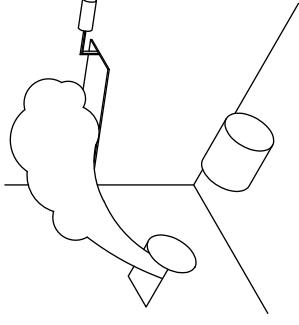


Apply a sealer to insert the cylinder into the hole

4

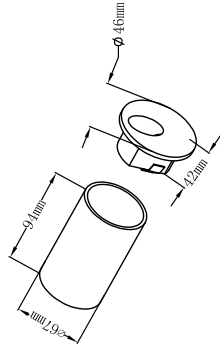


Sizes Map

5

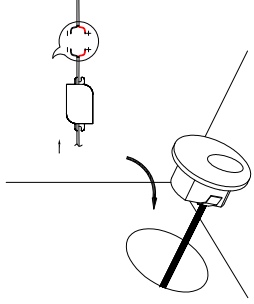

Connect wires & insert the luminaire into the stable box

6

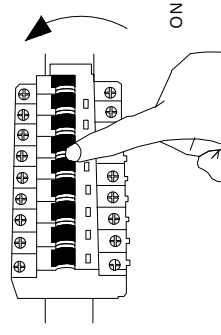

Turn on the general switch

