


# NOVA LUCE


9232212 9232213  
9232214 9232215

1

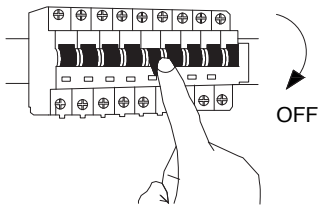


Turn off the general switch

2

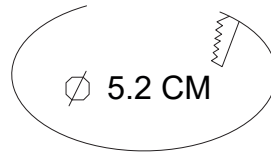


Make a hole

3

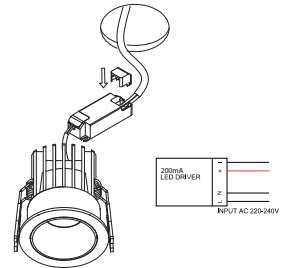


Connect the wires

4

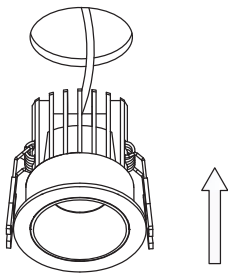

Apply the product in to place

5

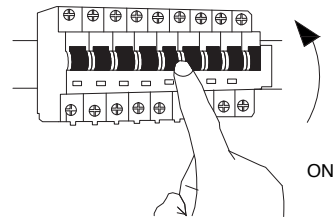

Turn on the general switch

