


# NOVA LUCE


9417053

1

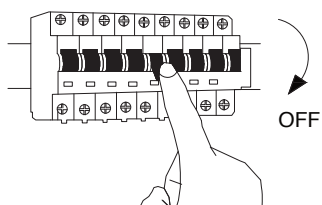


Turn off the general switch

2

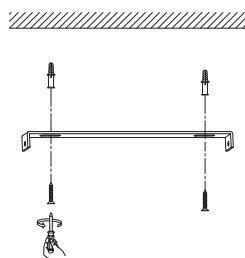

Drill holes Apply Plastic Anchors With Screws

3

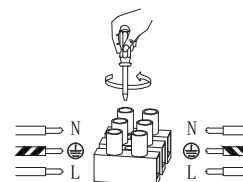


Connect The Wires

4



Apply The Side Screws

5

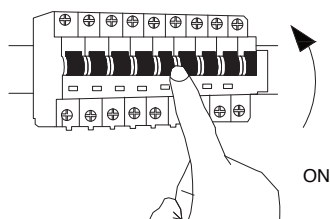

Turn on the general switch

