



NOVA LUCE

667001

①

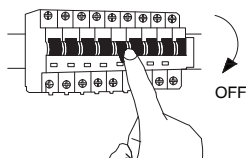


Turn off the general switch

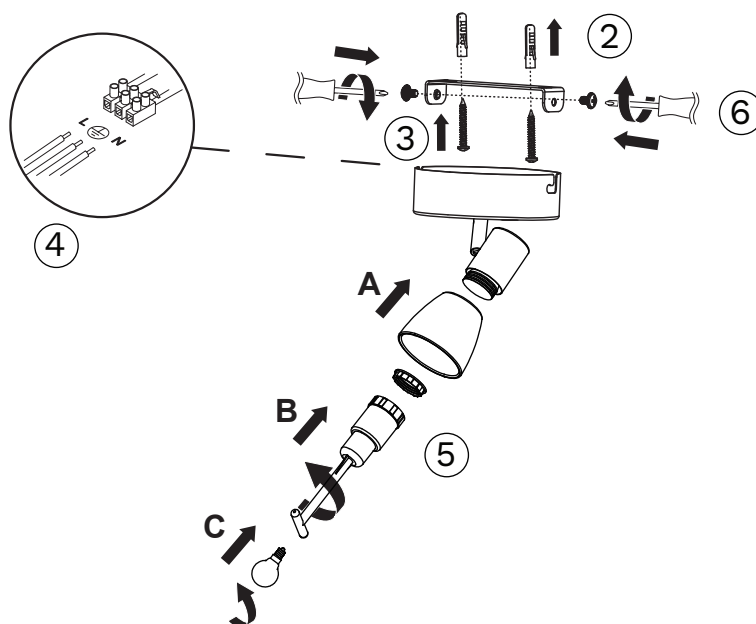

1. Turn off the general switch
2. Drill holes and apply plastic anchors
3. Apply screws
4. Connect the wires
5. Place the bulb & the product in to place
6. Apply the side screws

⑦

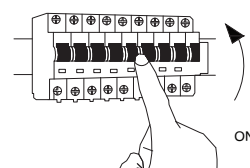

Turn on the general switch

