


# NOVA LUCE


9202261, 9202262

1

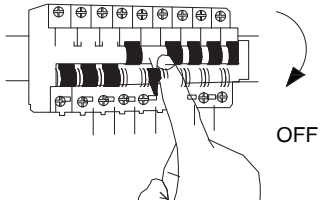


Turn off the general switch

2

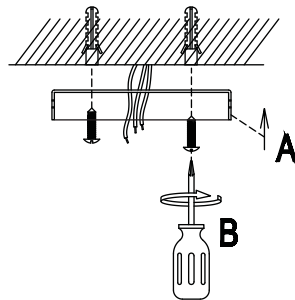


Drill holes, apply plastic anchors  
& tie up screws with a screw driver

3

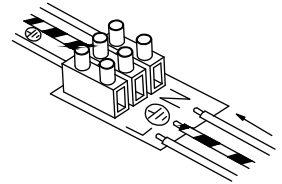


Connect the wires

4

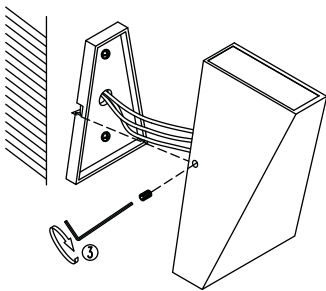

Fix it in place  
& apply side screws

5

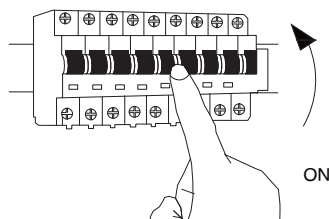

Turn on the general switch

6

