



# NOVA LUCE


9844095

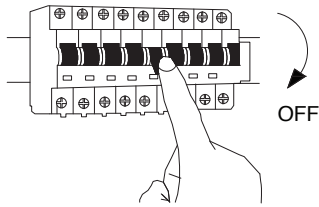


1. Turn off the general switch

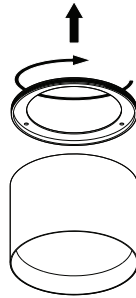


2. By rotating break it apart

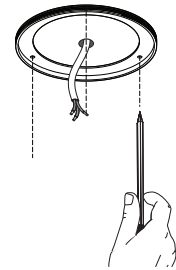


3. Mark where to drill

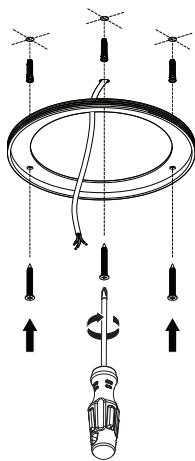


4. Apply plastic anchors & Screws

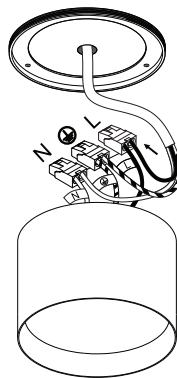

5. Connect the wires

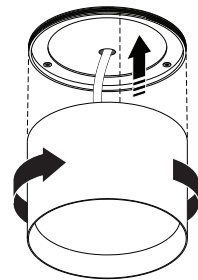

6. Fix it in place by rotating

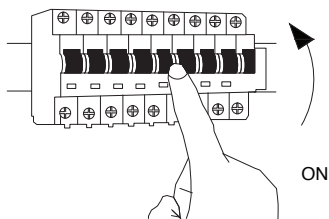

7. Turn on the general switch

