



# NOVA LUCE


9030529

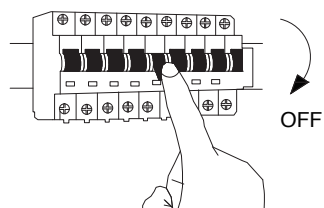


1. Turn off the general switch

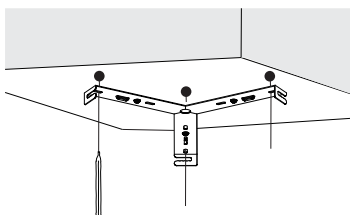


2. Align & mark

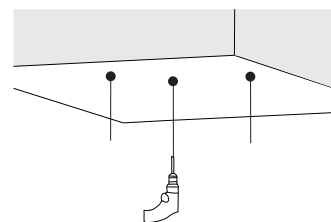


3. Drill holes on the marked areas

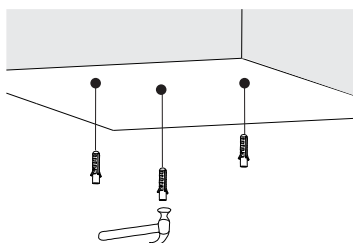


4. Apply plastic anchors

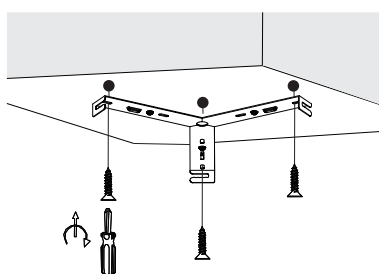


5. Apply the screws

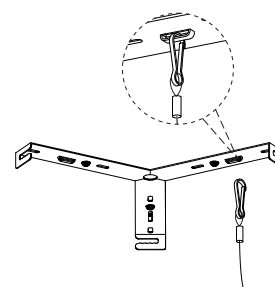


6. Place the element into place

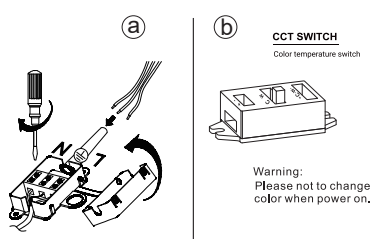

7. Connect the wires

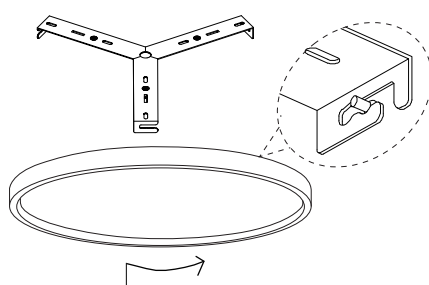

8. Put the product in place

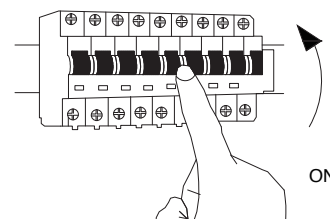

9. Turn on the general switch

