


# NOVA LUCE


9102461

1

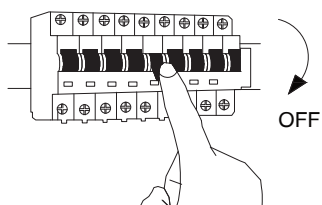


Turn off the general switch

2

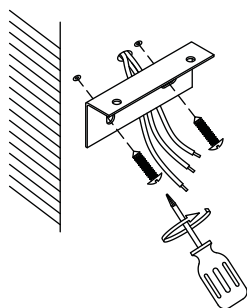


Drill holes, apply plastic anchors  
& apply screws with a screw driver

3

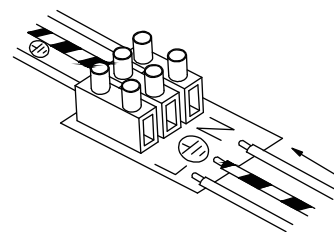


Connect the wires

4

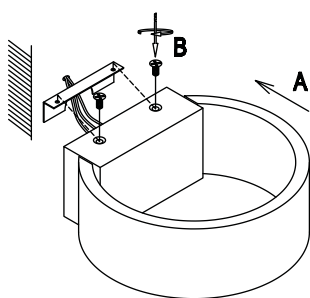

Fix it in place  
a apply the side screws  
to make it stable

5

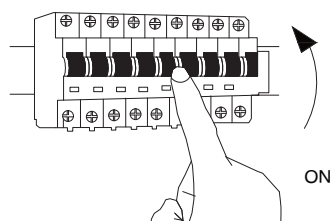

Turn on the general switch

