


# NOVA LUCE


726407

1

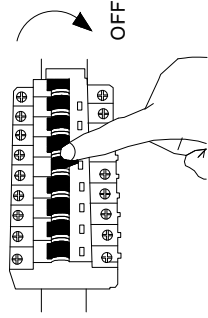


Turn off the general switch

2

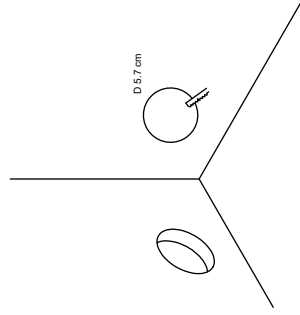


Create a CutOut

3

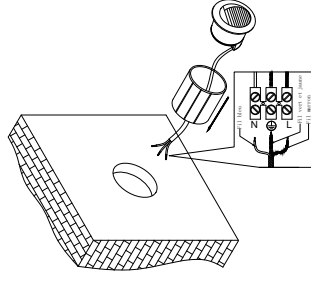


Apply a sealer  
To insert the box into the hole

4

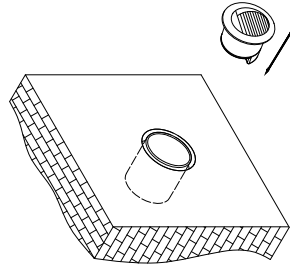

Connect wires  
& Insert the luminaire  
Into the stable box

5

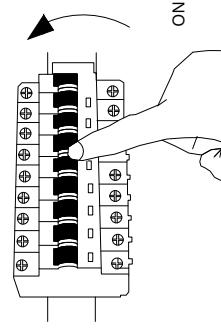

Turn on the general switch

6

