


# NOVA LUCE

9011321  
9011322

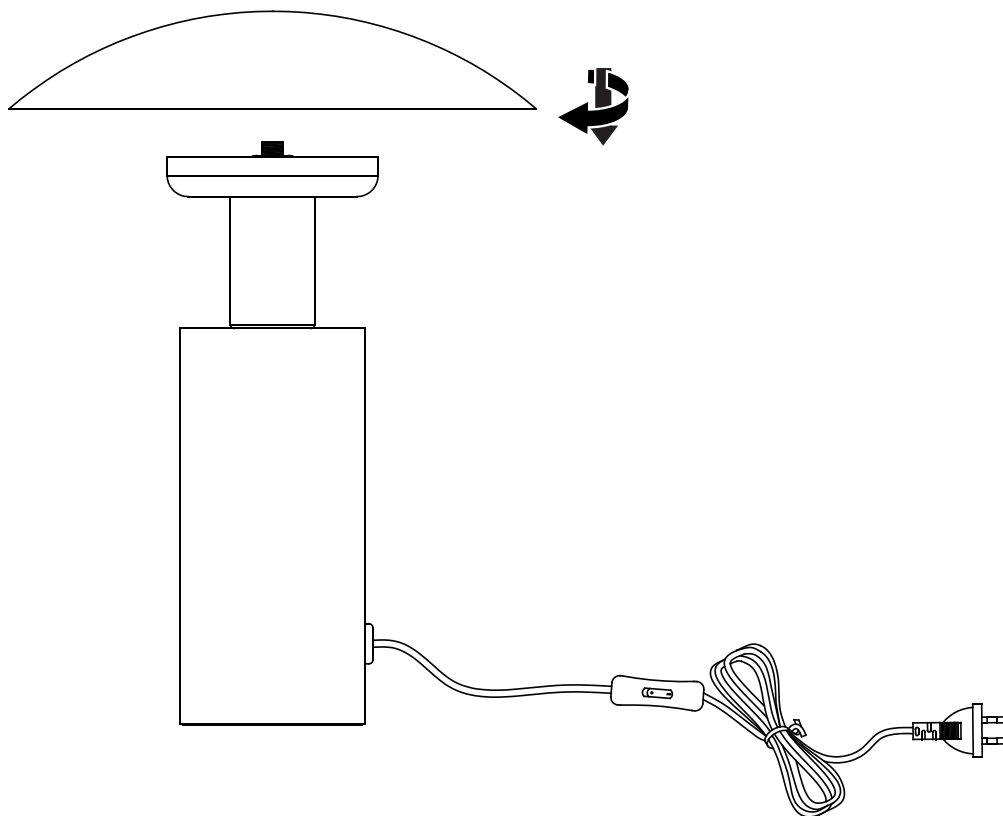

1. Install the upper lampshade
2. Plug in power

