


NOVA LUCE


9200201

①

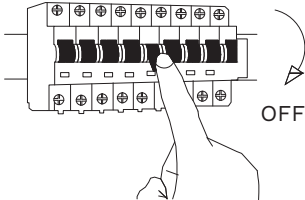


Turn off the general switch

②

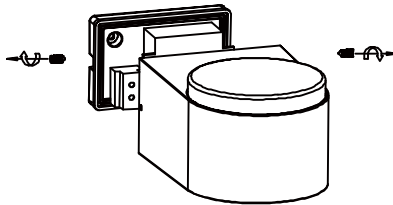


Untie the screws

③

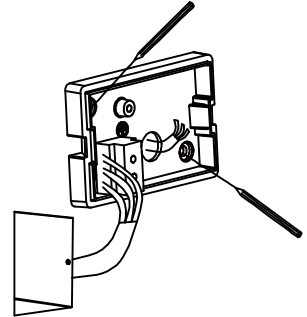


Mark the areas

④

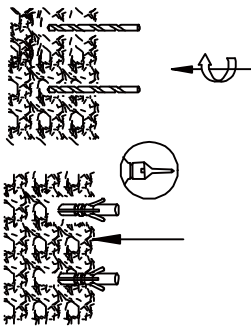


Drill holes & apply plastic anchors

⑤

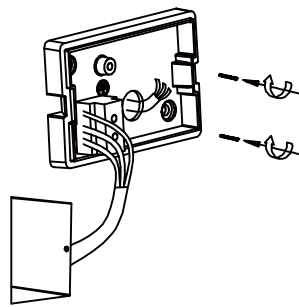


Tie up the screws to make it stable

⑥

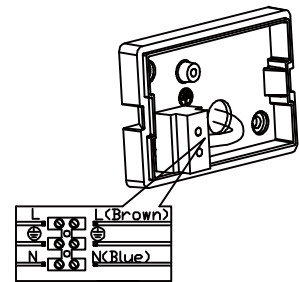


Connect the wires

⑦

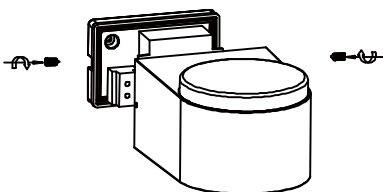

Tie up the side screws

⑧

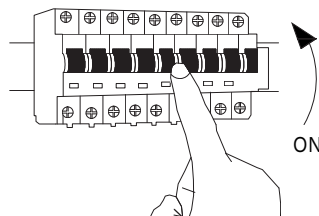

Turn on the general switch

